

# WINTERS



Since  
1953

*We're There.*



Pressure Gauge Installation, Operation and Maintenance

[www.winters.com](http://www.winters.com)

**WINTERS INSTRUMENTS**  
MANUFACTURER OF INDUSTRIAL INSTRUMENTATION

## *Operation and Maintenance of a Pressure Gauge*

### **Inspection Frequency**

The frequency of inspection is dependent on the severity of service and how critical the accuracy of the indicating pressure. The inspection frequency can range from monthly to annual basis. To ensure the accuracy of your pressure readings, it is strongly recommended that all pressure gauges be recalibrated and certified each year. Winters provides test certification that are traceable to the National Institute of Standards and Technology (NIST).

### **Isolating Valves**

It is recommended that isolating valves be fitted with the gauge. This enables the gauge to be removed at any time for checking, recalibration or replacing without interruption to the process. The valves should be opened or closed slowly to avoid sudden changes to pressure being applied to the gauge. It is recommended for systems that have an abrupt pressure surge at start-up to close the valves during initial start-up. Winters carries various types of valves.

### **Materials**

Brass wetted parts are suitable for use on the following types of media: air, oil, water and other non-corrosive fluids. For corrosive fluids, stainless steel should be specified. For special applications, other materials such as Monel® can be used as well. Diaphragm seals may also be considered. Please consult Winters Instruments for assistance.

### **Pulsation**

If pressures are expected to pulsate violently, oscillate with high frequency or occur with sudden shock, a snubber should be considered. Winters snubbers incorporate a sintered porous 316 stainless steel snubbing element with a large surface area to ensure long term effectiveness on most pressure media. Snubbers are available in three viscosity classifications: heavy oil, water and air. Brass, stainless steel or Monel® housing can be specified depending on the media used.

### **Storage**

All pressure gauges should be placed in dry storage under ambient room temperatures. It is recommended to store pressure gauges in their original packing boxes.

### **Temperatures**

The normal ambient temperature ranges are -40°C to 120°C (-40°F to 250°F) for dry gauges and -20°C to 65°C (-4°F to 150°F) for glycerin filled gauges. Process temperature up to 400°C (752°F) can be accommodated when a gauge is dry AND appropriate external cooling is applied. In situations where the process temperature is extreme, utilizing a syphon or remote mounting the pressure gauge with a capillary and diaphragm seal are reasonable alternatives. In general, a gauge is unduly hot if it cannot be grasped by hand without discomfort. It should be noted that gauges used on water might burst if exposed to frost.



### **Vibration**

Vibration can affect the dial reading of pressure gauges. These areas should be avoided as much as possible. Vibration effects can be minimized by the use of a dampening liquid such as glycerin or silicone. If vibration is extreme, then a flexible tube connected to an appropriate diaphragm seal should be considered. A Winters StabilizR™ movement can also be used to improve dial reading.

## *Installation of a Pressure Gauge*

### **Location**


Vibration and extreme ambient temperatures can affect the dial reading of the pressure gauge. These areas should be avoided as much as possible.

### **Mounting**

A suitable thread sealant is required for NPT threads such as pipe dope or PTFE tape. The gauge should only be installed by hand until the first 2 threads engage. This will allow the gauge socket thread to be seated correctly. An open ended wrench should then be used on the socket flats to tighten the gauge. DO NOT tighten the gauge by hand, otherwise it will severely damage the gauge.

### **Venting Procedures**

Due to pressure build up, some gauges (usually lower pressure ranges such as vacuum, up to 100 psi) may reflect a reading that is slightly “off zero”. To properly “vent” the pressure gauge, cut off the tip of the fill plug after you have installed the instrument. This allows the gauge to be equal to the atmospheric pressure. Venting can also be achieved by lifting the stainless steel or brass vent plug for a moment and re-seating (closing) it. In either case, the gauge should be installed in an upright position to avoid the liquid from leaking.

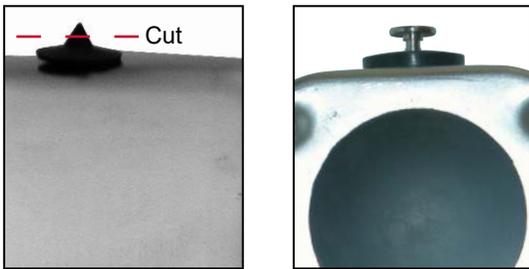

## *Recalibration Procedures*

Inspect the pressure gauge for “zero reading” when there is no applied pressure. In many cases, the gauge pointer can simply be adjusted for the gauge to work within specifications. However, if the gauge requires calibration, then follow the procedures below\*.

1. Remove the ring and lens
2. Slowly pressurize the gauge to its full scale and slowly release the pressure back down to zero
3. Check the gauge at a minimum of four equal pressure intervals against a certified test gauge\*
4. Adjust the movement accordingly by removing the pointer with a pointer extractor. Be careful not to bend the pointer shaft
5. Remove the dial plate by loosening the holding screws
6. When adjustments are completed, replace the dial plate and pointer
7. Re-check the gauge for accuracy
8. Check lens assembly gasket for any deformation, tears or cracks. If there are any visual defects, contact Winters to get a replacement gasket
9. Re-assemble the lens assembly

\*Winters can recalibrate and provide test certificates that are traceable to NIST

### **Replacing The Lens**

To replace a broken lens, check to see if the lens is held on by a bayonet or snap-on ring. To remove a bayonet ring, unscrew using a rubber belt wrench. To remove a snap-on ring, remove any screws holding the ring in place then pry off the ring with a small screwdriver. Remove all glass chips, insert new lens and re-insert the bayonet or snap-on ring. With snap-on rings, locate the ring joint at the bottom of the gauge. Crimp-on rings cannot be replaced once removed. If you would like to replace the lens or remove/replace crimp-on rings, please contact Winters.

### **Replacing The Pointer**

Remove the bayonet or snap-on ring as previously described above. Remove old pointer with pointer extractor or two small screwdrivers opposite each other under pointer hub. Pry off evenly, being careful not to bend the pointer shaft. Install the new pointer on zero. NOTE: Gauges with a zero stop pin must have the pointer set at a reference pressure (preferable mid-scale) to offset the preload against the stop pin. Re-install the lens.

**Note: When selecting a pressure gauge, always refer to ASME B40.100 (2013)**

# WINTERS INSTRUMENTS

MANUFACTURER OF INDUSTRIAL INSTRUMENTATION



**Winters Instruments is a global manufacturer of premium quality pressure and temperature instrumentation, with distribution partners in over 90 countries. Please contact us for your nearest Regional Manager.**

#### **Corporate - Canada**

Winters Instruments  
121 Rainside Road  
Toronto, Ontario  
M3A 1B2  
Tel: 416-444-2345  
1-800-WINTERS  
Fax: 416-444-8979  
sales@winters.com

#### **Canada - Calgary**

Winters Instruments  
3125-16 Street NE  
Calgary, Alberta  
T2E 7K8  
Tel: 403-723-6645  
1-800-WINTERS  
Fax: 403-723-6647  
calgary@winters.com

#### **USA - Houston**

Winters Instruments  
5400 W. Sam Houston Pkwy N.  
Houston, Texas  
77041  
Tel: 281-880-8607  
1-800-WINTERS  
Fax: 281-880-8614  
usasales@winters.com

#### **USA - Buffalo**

Winters Instruments  
Airport Commerce Park  
455 Cayuga Rd., Suite 650  
Buffalo, New York  
14225  
Tel: 716-874-8700  
1-800-WINTERS  
Fax: 716-874-8800  
usasales@winters.com

#### **Asia - Shanghai**

Winters Instruments  
Shanghai WitHub Hi-Tech  
Business Center Suite 308  
No. 333 Hongqiao Road  
Shanghai 200030 China  
Tel: 86-21-6104-2610  
Fax: 86-21-6104-2615  
asiasales@winters.com  
www.wintersasia.com

#### **Latin America**

Winters Instruments  
Lamadrid 121  
Los Troncos del Talar, B1608CEC  
Buenos Aires, Argentina  
Tel: 54-11-4715-3036  
latinsales@winters.com  
www.winters.com.ar

#### **Europe - Middle East - Africa**

Winters Instruments  
Dubai Airport Free Zone  
6WB G50  
Dubai, United Arab Emirates  
Tel: 971-4295-9177  
Fax: 971-4295-9177  
menasales@winters.com



Distributed by: