

UPZCP-3, 4, 6

Multi-zone pump control

Installation and operating instructions



English (US) Installation and operating instructions

Original installation and operating instructions.

These installation and operating instructions describe Grundfos UPZCP-3, 4, 6. Sections 1-4 give the information necessary to be able to unpack, install and start up the product in a safe way.

Sections 5-8 give important information about the product, as well as information on service and disposal of the product.

CONTENTS

	Page
1. General information	2
1.1 UPZCP-3, 4, 6	2
1.2 Limited warranty	2
1.3 Symbols used in this document	3
2. Receiving the product	3
2.1 Inspecting the product	3
3. Installing the product	3
3.1 Mechanical installation	3
3.2 Electrical connection	4
4. Starting up the product	7
4.1 LED diagnostics	7
4.2 DIP switch settings	7
5. Product introduction	8
5.1 Features and benefits	8
5.2 Identification	8
6. Servicing the product	9
6.1 Service parts	9
7. Technical data	9
8. Disposing of the product	9

1. General information

WARNING

Prior to installation, read these installation and operating instructions. Installation and operation must comply with local regulations and accepted codes of good practice.

This booklet should be left with the owner of the pump for future reference and information regarding its operation.

WARNING

The use of this product requires experience with and knowledge of the product.



Persons with reduced physical, sensory or mental capabilities must not use this product, unless they are under supervision or have been instructed in the use of the product by a person responsible for their safety. Children must not use or play with this product.

1.1 UPZCP-3, 4, 6

This is a multi-zone pump control relay for domestic hydronic heating systems. It provides control when zoning with pumps or low voltage zone valves.

1.2 Limited warranty

Products manufactured by Grundfos are warranted to the original user only to be free of defects in material and workmanship for a period of 24 months from date of installation, but not more than 36 months from date of manufacture. Grundfos' liability under this warranty shall be limited to repairing or replacing at Grundfos' option, without charge, F.O.B. Grundfos' factory or authorized service station, any product of Grundfos' manufacture. Grundfos will not be liable for any costs of removal, installation, transportation, or any other charges which may arise in connection with a warranty claim. Products which are sold but not manufactured by Grundfos are subject to the warranty provided by the manufacturer of said products and not by Grundfos' warranty. Grundfos will not be liable for damage or wear to products caused by abnormal operating conditions, accident, abuse, misuse, unauthorized alteration or repair, or if the product was not installed in accordance with Grundfos printed installation and operating instructions.

To obtain service under this warranty, the defective product must be returned to the distributor or dealer of Grundfos products from which it was purchased together with proof of purchase and installation date, failure date, and supporting installation data. Unless otherwise provided, the distributor or dealer will contact Grundfos or an authorized service station for instructions. Any defective product to be returned to Grundfos or a service station must be sent freight prepaid; documentation supporting the warranty claim and/or a Return Material Authorization must be included if so instructed.

MANUFACTURER WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSSES, OR EXPENSES ARISING FROM INSTALLATION, USE, OR ANY OTHER CAUSES. THERE ARE NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTEND BEYOND THOSE WARRANTIES DESCRIBED OR REFERRED TO ABOVE. EXCEPT AS EXPRESSLY HEREIN PROVIDED THE GOODS ARE SOLD "AS IS", THE ENTIRE RISK AS TO QUALITY AND FITNESS FOR A PARTICULAR PURPOSE, AND PERFORMANCE OF THE GOODS IS WITH THE BUYER, AND SHOULD THE GOODS PROVE DEFECTIVE FOLLOWING THEIR PURCHASE, THE BUYER AND NOT THE MANUFACTURER, DISTRIBUTOR, OR RETAILER ASSUMES THE ENTIRE RISK OF ALL NECESSARY SERVICING OR REPAIR.

Some jurisdictions do not allow the exclusion or limitation of implied warranties of merchantability and fitness for a particular purpose, of incidental or consequential damages and some jurisdictions do not allow limitations on how long implied warranties may last or require you to pay certain expenses as set forth above. Therefore, the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction.

1.3 Symbols used in this document



WARNING

If you do not observe these safety instructions, it may result in personal injury.



WARNING

If you do not observe these instructions, it may lead to electric shock with consequent risk of serious personal injury or death.

CAUTION

Caution

If you do not observe these safety instructions, it may result in malfunction or damage to the equipment.

2. Receiving the product

2.1 Inspecting the product

Examine the components carefully to make sure no damage has occurred to the product during shipment.

3. Installing the product

WARNING



Electrical shock and potential circuit damage. Disconnect the power supply before beginning installation. All wiring must comply with national and local electrical codes, ordinances and regulations. Failure to follow electrical codes could result in serious personal injury, death, and property damages.

CAUTION

Caution

Disconnect the power supply before changing any DIP switch settings.

3.1 Mechanical installation

3.1.1 Installing the base

Attach the base firmly to the wall surface with four screws and anchors using the key holes provided.

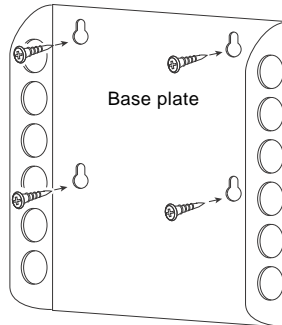


Fig. 1 Attach the base plate to the wall with screws and anchors

TM06 5607 5015

3.2 Electrical connection

CAUTION

Class 2 wiring must be segregated from the wiring of Class 1 circuits.

Caution

When Class 2 wiring is routed with Class 1 wiring, the Class 2 wiring insulation must be rated for the minimum voltage of the Class 1 wiring. Segregation is not required if all circuits are wired as Class 1, electric light or power circuits.

3.2.1 Wiring connections

- All electrical connections must be made using copper wire only.
- 12-16 AWG wire is recommended for 120 VAC connections.
- 12-22 AWG wire for thermostat connections.
- 12-22 AWG wire for 24 VAC connections.
- Use approved UL conduit fittings.

You find additional wiring schematics, specs, and troubleshooting help online at www.grundfos.us/controls.

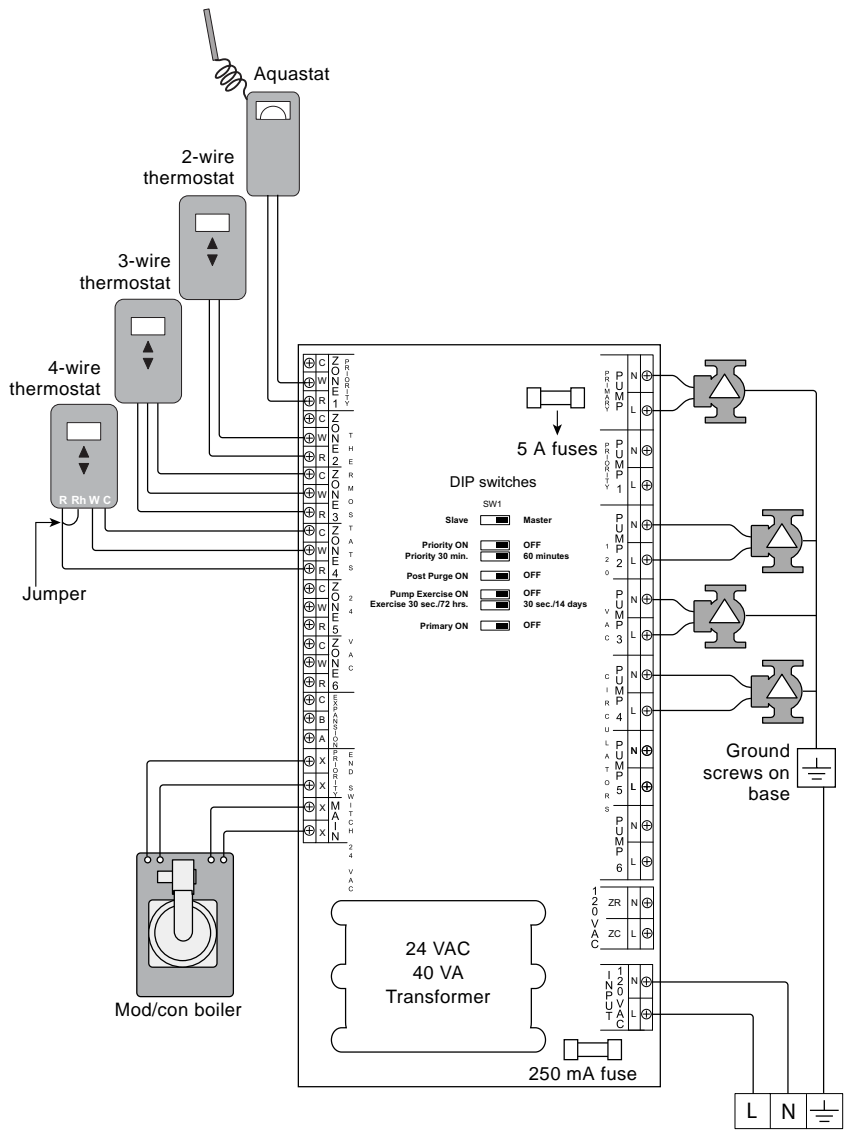


Fig. 2 UPZCP-6 multi-zone pump board layout

DIP switches

The DIP switch settings are also listed in section 4.2 *DIP switch settings*. See fig. 2.

Master/Slave: Allows expansion to additional UPZC units.

Priority ON: Zone 1 operates as priority and the other zones are switched off for a selectable 30- or 60-minute timeout.

Post purge ON: The boiler pump will continue to run for two minutes after priority ends to remove residual heat from the boiler.

Pump Exercise ON: The pumps will operate for 30 seconds every 72 hours or every 14 days.

Primary pump ON: During the PRIORITY demand, select whether the PRIMARY PUMP is ON or OFF.

TM06 5605 5015

Multi-zone pump board expansion

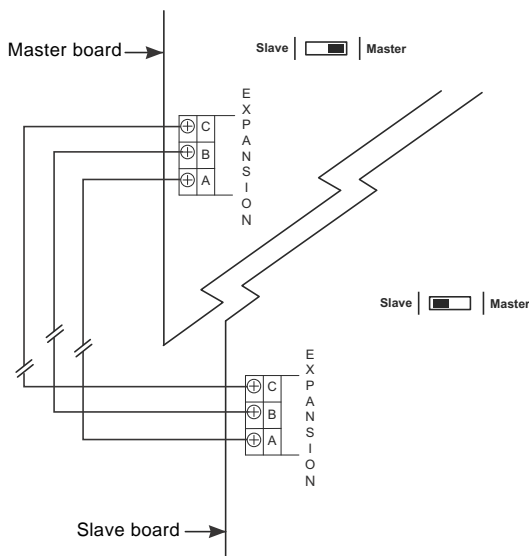


Fig. 3 UPZCP multi-zone pump board expansion

See fig. 3.

- You can only use the MASTER controller with PRIORITY.
- When priority calls, the MASTER board will produce 5 VDC between terminals B and C. This tells the SLAVE board to turn off any zones that are calling for heat. This also will close the contacts XX PRIORITY.
- When there is a demand for heat, the SLAVE board will produce 5 VDC between terminals A and C. This tells the MASTER board to activate any boiler or secondary pumps and close the contacts XX MAIN.
- You can connect the pump and valve boards.
- When the SLAVE board calls for heat, the secondary pump will be powered. If a boiler pump and secondary pump are to be used, connect them to the same terminals.
- You can use the low voltage wire to connect ABC terminals.
- Connect the 120 VAC power supply to each board.

CAUTION

Caution

Connect the L and N terminals the same way on each board. If switched, a differential of 240 VAC can occur resulting in damage to the equipment.

TM06 5606 5015

4. Starting up the product

4.1 LED diagnostics

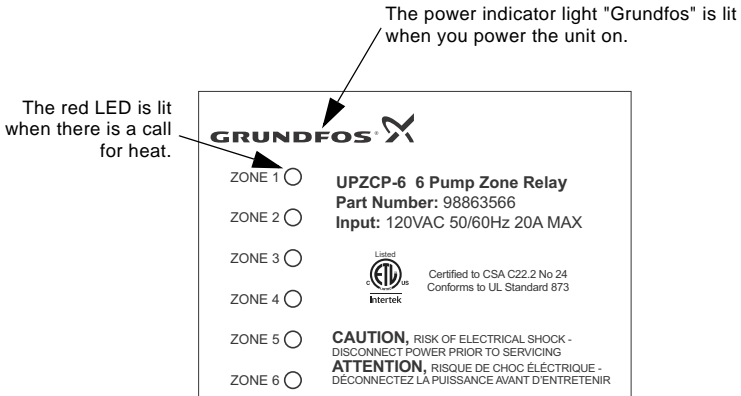


Fig. 4 The indicator lights located on the control plate

4.2 DIP switch settings

CAUTION

Caution

Disconnect the power supply before changing any DIP switch settings.

Slave	<input type="checkbox"/>	Master
Priority ON	<input type="checkbox"/>	OFF
Priority 30 min.	<input type="checkbox"/>	60 minutes
Post Purge ON	<input type="checkbox"/>	OFF
Pump Exercise ON	<input type="checkbox"/>	OFF
Exercise 30 sec./72 hrs.	<input type="checkbox"/>	30 sec./14 days
Primary ON	<input type="checkbox"/>	OFF

Master/Slave

Allows expansion to additional Grundfos UPZC units.

Priority ON

Zone 1 operates as priority and the other zones are switched off for a selectable 30- or 60-minute timeout.

Post purge ON

The boiler pump will continue to run for two minutes after priority ends to remove residual heat from the boiler.

Pump Exercise ON

Pumps will operate for 30 seconds every 72 hours or every 14 days.

Primary pump ON

During the PRIORITY demand, select whether the PRIMARY PUMP is ON or OFF.

TM06 5585 0516

TM06 5584 4915

5. Product introduction

5.1 Features and benefits

- Compatible with 2-, 3-, and 4-wire low voltage controllers or thermostats.
- Wiring ease with 120 VAC, ground and low voltage screw terminal inputs.
- Low voltage end-switch output terminals for the zone valves.
- Zone priority with selectable time-out feature
- Pump exercise feature, selectable 72-hours or 14-days.
 - The pumps will be turned on for 30 seconds every 72 hours or 14 days in order to prevent pumps from seizing up. This feature will only work if there is a jumper wire connecting the ZR ZC terminals on the pump controller.
- Post purge feature for pump controllers (3, 4, and 6 zones).
 - After the priority zone calls for heat, the priority pump will be allowed to run for an additional 2 minutes after the thermostat contacts open. This allows some of the residual heat in the boiler to be transferred to the water.
- Boiler demand terminals.
 - The two terminals, labeled MAIN XX, are wired to the boiler. When the contacts close, the boiler starts and will come up to a preset temperature for hydronic heating.
- DHW terminal.
 - The two terminals, labeled PRIORITY XX, are wired to the boiler. When the contacts close, the boiler starts and will come up to a preset temperature for domestic hot water heating.
- ZR and ZC terminals.
 - Available on the pump controllers only. These terminals are connected by a jumper wire at the factory. The ZR terminal is always powered with 120 VAC. When you remove the jumper wire, all 120 V power is removed from the pumps.
- Front facing LED indicator lights on the cover.
- Side-mounted terminal connections for ease of wiring and installation.

5.2 Identification

5.2.1 Part numbers

Model	Description	Part number
UPZCP-3	Three-pump zone control	98863563
UPZCP-4	Four-pump zone control	98863565
UPZCP-6	Six-pump zone control	98863566

5.2.2 Production code

The production code represents the date of manufacture. You find the production code on the circuit board and the carton label.

Example:

PC 1542 = year 2015, week 42.

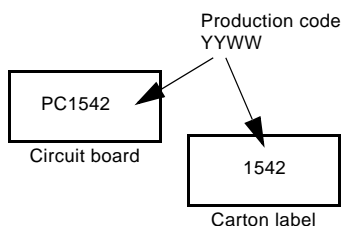


Fig. 5 Locating production code

6. Servicing the product

6.1 Service parts

Part	Description	Part number
5 A fuse	Kit, UPZC pump fuse, 5-pack	98996468
250 mA fuse	Kit, UPZC transformer fuse, pump board 250 mA, 5-pack	98996472
500 mA fuse	Kit, UPZC transformer fuse, pump board 500 mA, 5-pack	98996473

7. Technical data

	Three-zone pump	Four-zone pump	Six-zone pump
Model number	UPZCP-3	UPZCP-4	UPZCP-6
Part number	98863563	98863565	98863566
Input power 60 Hz	120 VAC		
Transformer voltage	24 VAC, 40 VA, Class 2		
Thermostat output [A]	0.375	0.5	0.75
Maximum single phase motor rating, per zone [A]	5		
Maximum combined load rating: output @ 120 VAC [A]	20		
Temperature range (storage) [°F (°C)]	50-100 (10-38)		
Temperature range (maximum operation) [°F (°C)]	0-100 (-18 - +38)		
Maximum operating humidity range [%] RH	90		
Number of knockouts	12		
Size of knockouts [in. (mm)]	0.875 (22)		
Dimensions, W x H x D [in. (mm)]	8.15 x 10.67 x 2.72 (208 x 272 x 70)		
Approvals	CSA 22.2 No. 24/UL Standard 873		
Relay type	Sealed		
Cover panel	ABS - fire rated		
Base material	Galvanized steel		
Terminal block (side mounted)	PA66		
Front display lights	LED		

8. Disposing of the product

This product or parts of it must be disposed of in an environmentally sound way:

1. Use the public or private waste collection service.
2. If this is not possible, contact the nearest Grundfos company or service workshop.

Subject to alterations.

Grundfos Kansas City

17100 West 118th Terrace
Olathe, Kansas 66061
Phone: +1-913-227-3400
Fax: +1-913-227-3500

www.grundfos.us

Grundfos Canada

2941 Brighton Road
Oakville, Ontario L6H 6C9 Canada
Phone: +1-905 829 9533
Fax: +1-905 829 9512

www.grundfos.ca

Grundfos México

Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
C.P. 66600 Apodaca, N.L. Mexico
Phone: +011-52-81-8144 4000
Fax: +011-52-81-8144 4010

www.grundfos.mx

© Copyright Grundfos Holding AS

The name Grundfos, the Grundfos logo, and **be think innovate** are registered trademarks owned by Grundfos Holding AS or Grundfos AS, Denmark. All rights reserved worldwide.

99028491 0216
ECM: 1173387